

SmartCore

Kapazitätsanzeige

Akustisch:


Zum Ablesen der Kapazität genügt ein kurzer Druck auf das Tastfeld. Zunächst erfolgt ein akustisches Signal, welches bei der Verwendung am Helm- oder Stirnband eine schnelle, in 20%-Stufen genaue Überprüfung der Restkapazität ermöglicht.

| | | |
|-----|---|--------|
| 5 x | 🔊 | = 100% |
| 4 x | 🔊 | = 80% |
| 3 x | 🔊 | = 60% |
| 2 x | 🔊 | = 40% |
| 1 x | 🔊 | = 20% |

Optisch:

Die optische LED-Anzeige erfolgt durch 5 rote Kontroll-LEDs. Die LEDs kennen dabei zwei Betriebszustände: blinkend und dauerhaft leuchtend. Dabei gilt: **eine dauerhaft leuchtende LED steht für einen 20%-Schritt, eine blinkende LED für einen 10%-Schritt.**

Beispiel: 3 LEDs (20%, 40%, 60%) **leuchten**
1 LED (80%) **blinkt** = 70% Restkapazität

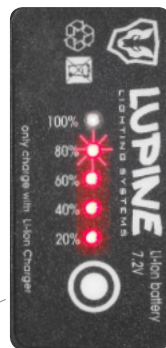

Rücklicht-Funktion

Zum Aktivieren des Rücklichts den Taster **2 Mal kurz hintereinander im Sekundenabstand drücken**. Im Anschluss leuchten alle 5 LEDs dauerhaft. Zum Ausschalten des Rücklichts den Taster erneut drücken.

Lauflicht-Funktion

Durch **3 Tastenklicks im Sekundenabstand** wird ein Lauflicht aktiviert, bei dem durchlaufend jeweils eine LED abwechselnd leuchtet. Zum Ausschalten den Taster erneut drücken.

Hinweis: Die Kapazitätsanzeige erlischt nach wenigen Sekunden wieder von alleine. Ist dies nicht der Fall, wurde eventuell das Rücklicht aktiviert und die 5 roten LEDs bedeuten keineswegs, dass der Akku noch komplett geladen ist.






SmartCore

Capacity Indicator




Audible:

To check the capacity, simply press the touch-pad once. At first an audible signal will sound, which is especially useful while using the battery mounted on a helmet or headband, to give a quick reading in 20% steps.

| | | |
|-----|---|--------|
| 5 x |  | = 100% |
| 4 x |  | = 80% |
| 3 x |  | = 60% |
| 2 x |  | = 40% |
| 1 x |  | = 20% |

Visible:

The visible indicator uses 5 red LEDs. The LEDs can operate in two different operating states: blinking and continuous. LED meanings: **A blinking LED is indicating a 10% step and a continuously glowing LED a 20% step.**

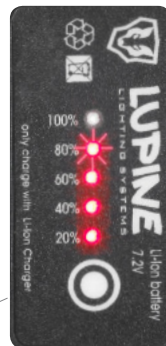

Example: 3 LEDs steady glow (20 %, 40 %, 60 %) = 70 % remaining capacity
1 LED blinking (80 %)

Taillight

To run the taillight simply **press the touch pad two times second-by-second** and the 5 LEDs will operate continuously. To switch off the taillight, simply press the pad again.

Moving light:

Press the touch pad three times second-by-second to activate the moving light. To switch it off

Note: The capacity indicator will fade out within a few seconds. If it does not, eventually the taillight was activated and the 5 glowing LEDs do by far not mean the battery is fully charged.